



Two wire transmitter for RTD

RTD Temperature Transmitter Datexel LLC. Tel 561 779 5660. Email Info@Datexel.com. Web Site www.Datexel.com.

FEATURES

- Configurable input for RTD, mV, Resistance and Potentiometer
- Damping function on output
- 4 ÷ 20 mA configurable output on current loop
- Configurable by Personal Computer
- High accuracy
- On-field reconfigurable
- Configurable by interface PRODAT05 or PRODAT-06 without power loop connected
- EMC compliant CE mark
- Suitable for DIN B in-head mounting
- Option for DIN rail mounting in compliance with EN 50022 (DIN RAIL Option)

DAT 1010









GENERAL DESCRIPTION

The transmitter DAT 1010 is able to execute many functions such as : measure and linearisation of the temperature characteristic of RTDs sensors, conversion of a linear resistance variation, conversion of a voltage signal even coming from a potentiometer connected on its input. The measured values are converted in

a 4÷20 mA current signal . The device guarantees high accuracy and performances stability both in time and in temperature.

The programming of the DAT 1010 is made by a Personal Computer using the software PROSOFT, developed by DATEXEL, that runs under the operative system "Windows™". By use of PROSOFT, it is possible to configure the transmitter to interface it with the most used sensors.

In case of sensors with a no-standard output characteristic, it is possible to execute, via software, a "Custom" linearisation (per step) to obtain an output linearised signal

For Resistance and RTDs sensors it is possible to program the cable compensation with 3 or 4 wires.

It is possible to set the minimum and maximum values of input and output ranges in any point of the scale, keeping the minimum span shown in the table below. Moreover it is available the option of alarm for signal interruption (burn-out) that allows to set the output value as high or low out of scale. On the device is provided the function "Damping" that allows the user to set a programmable filter up to 30 seconds to reduce eventual sudden variations of the

The programming of the device can be executed without the power loop connected using the interface PRODAT-05 or PRODAT-06.

It is housed in a self-extinguish plastic enclosure suitable for DIN B in-head mounting Moreover (by proper mounting kit) it is possible to mount the DAT 1010 on DIN rail.

USER INSTRUCTIONS

The transmitter DAT 1010 must be powered by a direct voltage between 10 to 32 V and applied to the terminals +V and -V.

The 4÷20 mA output signal is measurable in the power loop as shown in the section "Output/Power supply connections"; Rload is the input impedance of instruments on the current loop; to obtain a correct measure, the value of Rload will be calculated as function of the power supply value (see section "Technical specification - Load characteristic").

The input connections must be made as shown in the section "Input connections".

To configure, calibrate and install the transmitter refer to sections " DAT1010: configuration and calibration" and "Installation Instructions".

TECHNICAL SPECIFICATIONS (Typical at 25 °C and in nominal conditions)

Input type	Min	Max	Min. span
RTD(*) 2,3,4 wires			
Pt100	-200°C	850°C	50°C
Pt1000	-200°C	200°C	50°C
Ni100	-60°C	180°C	50°C
Ni1000	-60°C	150°C	50°C
Voltage			
mV	-100mV	+700mV	2 mV
Potentiometer			
(Nominal value)	0 Ω	200Ω	10%
	200 Ω	500Ω	10%
	0.5 KΩ	50 KΩ	10%
RES. 2,3,4 wires			
Low	0 Ω	300Ω	10 Ω
High	0 Ω	2000Ω	200 Ω
Output type	Min	Max	Min. span
Direct current	4 mA	20 mA	4 mA
Reverse current	20 mA	4 mA	4 mA

Input	calibration	(1)
-------	-------------	-----

RTD > of ±0.1% f.s. or ±0.2°C > of $\pm 0.1\%$ f.s. or $\pm 0.15~\Omega$ Low res. High res. > of $\pm 0.2\%$ f.s. or $\pm 1~\Omega$ mV > of ±0.1% f.s. or ±18 uV

Output calibration

Current ±7uA

Input impedance

>= 10 MΩ mV

Linearity (1)

RTD ± 0.1 % f.s.

Line resistance influence <=0.8 uV/Ohm mV

RTD 3 wires $0.05\%/\Omega$ (50 Ω balanced max.)

RTD 4 wires $0.005\%/\Omega$ (100 Ω balanced max.)

RTD excitation current

Typical 0.350 mA

Thermal drift (1)

Full scale ± 0.01% / °C

Burn-out values

Max. output value about 20.5 mA Min. output value about 3.8 mA Max. fault value about 21.6 mA Min. fault value about 3.5 mA

Damping time constant

Selectable from 0.3 to 30 s. Value 0: function not active.


(1) referred to input Span (difference between max. and min. values)

Response time (10÷ 90%) about 400 ms

Power supply

Power supply voltage 10 .. 32 Vdc Reverse polarity protection 60 Vdc max

Load characteristic - Rload (maximum load value on current loop per power supply value)

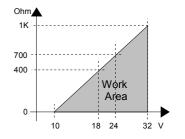

Temperature & humidity

-40°C .. +85°C Operative temperature Storage temperature -40°C .. +85°C Humidity (not condensed) 0 .. 90 %

Housing

Material PC + ABS V0 Mounting DIN B head or bigger Weight about 50 g.

Dimensions \emptyset = 43 mm; H = 24 mm

EMC (for industrial environments) Immunity EN 61000-6-2 **Emission** EN 61000-6-4

DAT 1010: CONFIGURATION AND CALIBRATION

- CONFIGURATION WITH POWER LOOP CONNECTED

- 1) Power-on the DAT1010 by a direct voltage between 10 ÷ 32 V or (only to configure) by a 9 V battery
- 2) Remove the protection plastic cap on DAT 1010.3) Connect the interface PRODAT to the Personal Computer and to device. (see section "DAT1010: PROGRAMMING WITH POWER LOOP CONNECTED").
- 4) Run the software PROSOFT.
- 5) Set the parameters of configuration .
- 6) Program the device

- CONFIGURATION BY PRODAT-05 or PRODAT-06

- Remove the protection plastic cap on DAT 1010.
- 2) Connect the interface PRODAT to the Personal Computer and to device. (see section "DAT1010: PROGRAMMING BY PRODAT").
- 3) Run the software PROSOFT.
- 4) Set the parameters of configuration
- 5) Program the device

CALIBRATION CONTROL


With software PROSOFT running:

- 1) Connect on the input a calibrator setted with minimum and maximum values referred to the electric signal or to the temperature sensor to measure.
- 2) Set the calibrator at the minimum value.
- Verify that the DAT 1010 provides on output the minimum setted value.
- 4) Set the calibrator at the maximum value.
- 5) Verify that the DAT 1010 provides on output the maximum setted value.
- 6) In case of regulation of value obtained in the step 3 and 5, use the ZERO and SPAN regulators of software PROSOFT.


The variation introduced from these regulators must be calculated as percentage of the input range

7) Program the device with the new parameters


DAT1010: PROGRAMMING WITH POWER LOOP CONNECTED

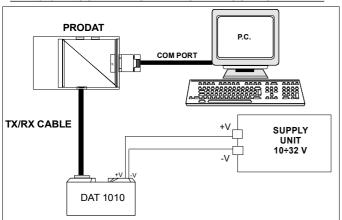


DAT1010: PROGRAMMING BY PRODAT

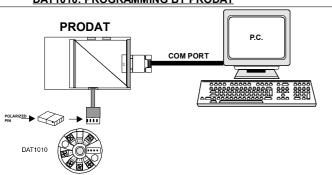

DIN B in-head mounting

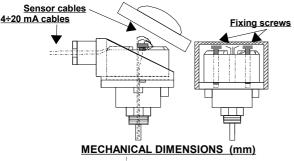


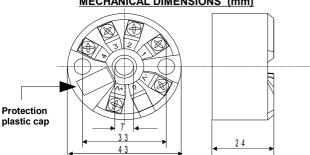

INSTALLATION INSTRUCTIONS
The device DAT 1010 is suitable for direct DIN B in-head mounting. The transmitter must be fixed inside the probe by the proper kit.


By apposite stirrup, provided on request, it is possible to mount the device on DIN rail in compliance with EN-50022. It is necessary to install the device in a place without vibrations; avoid to routing conductors near power signal cables .

DIN rail mounting (DIN RAIL Option)

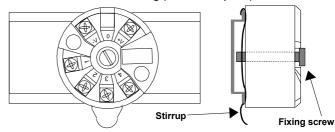


DAT1010: CONNECTIONS


INPUT CONNECTIONS

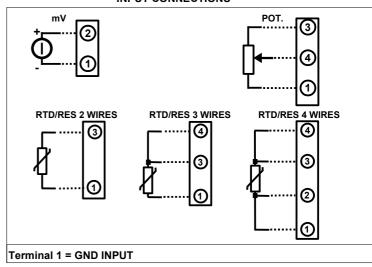

OUTPUT/POWER SUPPLY CONNECTIONS

 

DAMPING FUNCTION

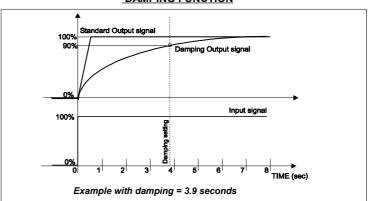

HOW TO ORDER

The DAT1010 is provided as requested on the Customer's order Refer to the section "Technical specification" to determine input and output ranges. The mounting kit for DIN rail is provided only on request with code DIN RAIL In case of the configuration is not specified, the parameters must be set by the user.

